




Installation Instructions

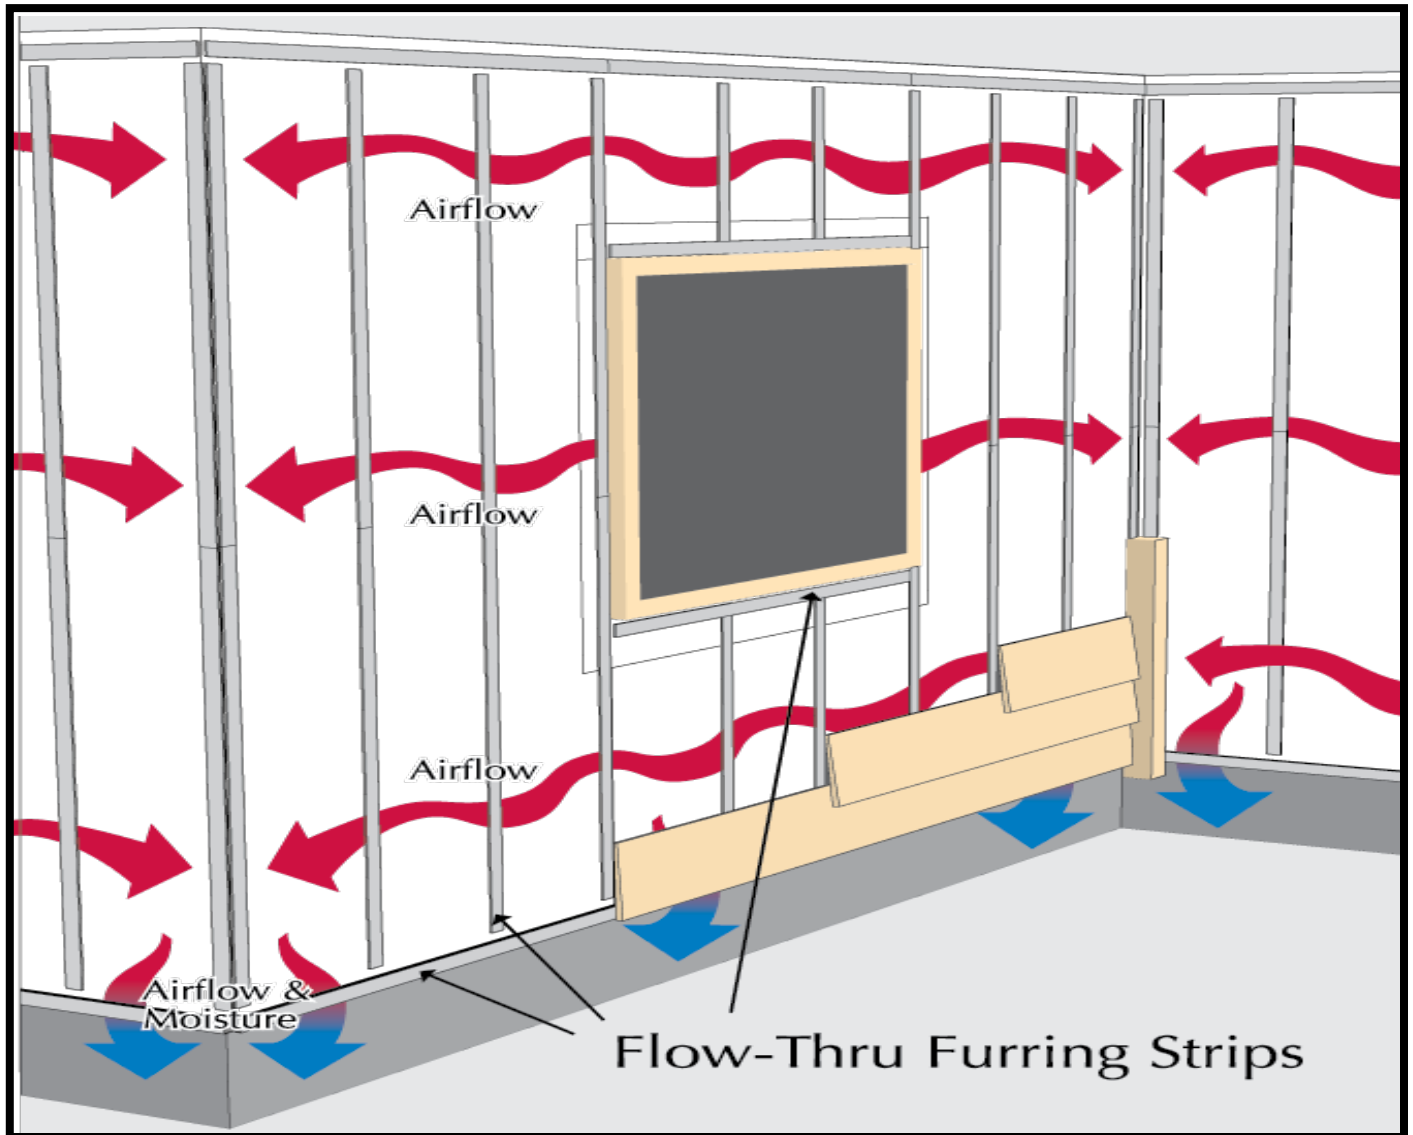

Step 1: Once house wrap has been installed, install a $\frac{3}{4}$ " (19mm) Trimline Flow Thru Furring Strip horizontally just below the soffit, at the very top of the house wall. Also install a $\frac{3}{4}$ " (19mm) Trimline Flow Thru Furring Strip horizontally at the bottom of the wood on the house wall.

Step 2: Install $\frac{3}{8}$ " (10mm) Trimline Flow Thru Furring Strips every 16" on center using fasteners that penetrate plywood $\frac{1}{2}$ ".

Step 3: Trimline Flow Thru Furring Strips should be installed approximately 1" from the edge of the wall. Furring Strips should also be used under trim, in corners and around windows. The Furring Strips should be installed to support the width of the trim.

Step 4: Attach Siding according to building codes using fasteners long enough to sufficiently penetrate into framing.

800-438-2920
www.trimline-products.com

Patent: 6,938,383 B2



A division of Diversi-Plast